


Xinput, Dinput, X/Y, DPAD,  
TURBO, PAIR, SELECT

START

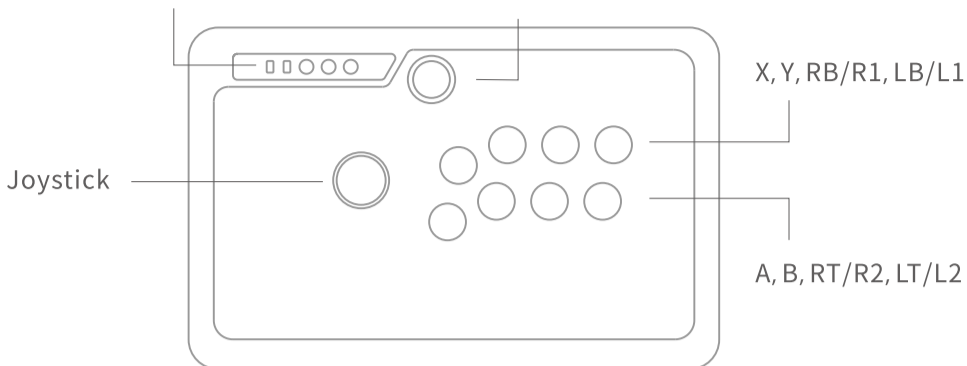

## Bluetooth Connection

- NES30 Arcade Stick will auto reconnect to your devices once it has been successfully paired.

## Android (D-Input)

1. Select DINPUT MODE via DINPUT/XINPUT switch, then press START to power on the joystick. Blue LED will blink once per cycle.
  2. Press and hold PAIRING button for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
  3. Enter your device's Bluetooth setting to pair with [8Bitdo NES30 Arcade]. LED will be solid blue when connection is successful.
- USB Connection: connect your NES30 Acade Stick to your Android device via USB Cable after step 1.

## Windows (X-Input)

1. Select XINPUT MODE via DINPUT/XINPUT switch, then press START to power on the joystick. Blue LED will blink twice per cycle.
  2. Press and hold PAIRING button for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
  3. Enter your device's Bluetooth setting to pair with [8Bitdo NES30 Arcade(x)]. LED will be solid blue when connection is successful.
- USB Connection: connect your NES30 Acade Stick to your Windows device via USB Cable after step 1.
  - D-input and X-input modes can be interchanged while playing.

## macOS

1. Press and hold START + A to power on the joystick. Blue LED will blink three time per cycle.
  2. Press and hold PAIRING button for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
  3. Enter your device's Bluetooth setting to pair with [Wireless Controller]. LED will be solid blue when connection is successful.
- USB Connection: connect your NES30 Acade Stick to your macOS device via USB Cable after step 1.

## Switch (by default)

1. Press and hold START + Y to power on the joystick. Blue LED will blink four time per cycle.
  2. Press and hold PAIRING button for 2 seconds to enter pairing mode. Blue LED will rapidly blink.
  3. Go to your Switch Home Page to click on Controllers, then click on Change Grip/Order.
  4. Blue LED will be solid blue when connection is successful.
- When connected to your Switch in Switch Mode, DOWN + SELECT = Switch HOME button.

## Battery

Status	LED Indicator
Low battery mode	Red blinking LED
Battery charging	Green blinking LED
Battery fully charged	Green LED turns off

## Power Saving

- Joystick enters sleep mode in 1 minute with no Bluetooth connection.
- Joystick enters sleep mode in 15 minutes with no use.
- Use the joystick to wake your NES30 Joystick.

## Support

Please visit [support.8bitdo.com](https://support.8bitdo.com) for further information and additional support.