

Nintendo Entertainment System & Nintendo Family Computer (Model HVC-101) & Analogue Nt / Nt mini

- 1 – plug the receiver to your chosen system, Blue LED blinks once per cycle
- 2 – press **start** on the controller to pair
- 3 – blue LEDs on both the controller and receiver become solid when connection is successful

battery



status –		LED indicator –
low battery mode	→	red LED blinks
battery charging	→	red LED stays solid
battery fully charged	→	red LED turns off

- built-in 180 mAh Li-on with 18 hours of play time
- rechargeable via USB cable with 1 – 2 hour charging time
- Controller turns off in 1 minute with no connection and 15 minutes with connection but no use

Safety Warnings



- Please always use batteries, chargers, and accessories provided by the manufacturer.
- The manufacturer is not liable for any safety issues arising from the use of non-manufacturer-approved accessories.
- Do not attempt to disassemble, modify, or repair the device yourself. Unauthorized actions may result in serious injury.
- Avoid crushing, disassembling, puncturing, or attempting to modify the device or its battery, as these actions can be dangerous.
- Any unauthorized changes or modifications to the device will void the manufacturer's warranty.


Retrieve a lost connection or connect to a new receiver

- 1 – Turn on the controller then press and hold **select** button for 3 seconds. Blue LED starts to rapidly blink
- 2 – Move the controller close to the receiver. Blue LED becomes solid when connection is successful

support



- Please visit support.8bitdo.com for further information & additional support

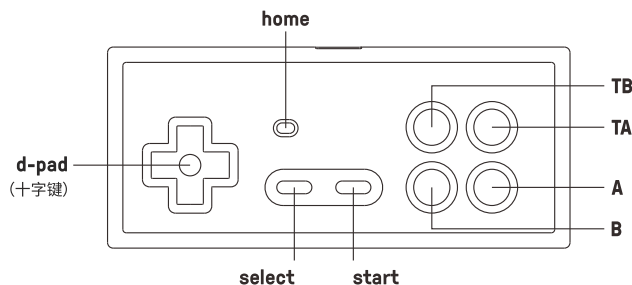

Nintendo Entertainment System & Nintendo Family Computer (Model HVC-101) & Analogue Nt / Nt mini

- * 将接收器插入主机端口,接收器蓝灯闪烁。
- * 轻按手柄 [Start] 键即可连接,连接成功后蓝灯常亮。

电池



电量状态		指示灯状态
电量不足	→	红灯闪烁
充电中	→	红灯常亮
充电完成	→	红灯熄灭

- * 内置 180 mAh 锂电池,可持续使用约 18 小时。
- * 充电时间约 1 - 2 小时,充电完成后指示灯熄灭。
- * 开机后 1 分钟内无连接,或连接后 15 分钟无操作会自动关机。

安全警示



- * 请使用制造商的电池、充电器、配件。
- * 在用户使用第三方的配件时,制造商不能对用户的安全负责。
- * 请勿自行拆卸、改装或修理设备。
- * 请勿挤压、拆解、刺穿或尝试改装设备及电池。
- * 对设备的任意变动或改装,将导致制造商对设备不予保修。

重新匹配

- * 若无法连接或者更换接收器,可在开启手柄后按住 [select] 键至指示灯快速闪烁,将手柄靠近接收器重新配对,配对完成后接收器与手柄指示灯呈常亮显示。

固件升级



- * 以上使用说明如有修改或变动请以网站最新电子版为准,恕不另行通知。