

- 1 – audio switch
  - headphones on
  - mic off
  - all off
- 2 – mode switch
  - joystick mode
  - gamepad mode
- 3 – view button
- 4 – share button
- 5 – menu button
- 6 – joystick
- 7 – joystick switch
  - Left joystick
  - D-Pad
  - Right joystick
- 8 – star button
- 9 – Xbox button
- 10 – status LED
- 11 – profile LED
- 12 – profile button
- 13 – power LED
- 14 – 2.4G receiver
- 15 – microphone mute LED
- 16 – 3.5mm audio jack

- Press the **Xbox** button to turn on the Arcade Stick
- Hold the **Xbox** button for 6 seconds to turn off the Arcade Stick
- Hold the **Xbox** button for 12 seconds to force the Arcade Stick off

## Windows



- required system: Windows 10 (1903) or above

### Wireless connection

1. connect the **2.4G receiver** to the USB port of your Windows device
2. turn the **mode switch** to **gamepad mode**
3. press **Xbox** button to turn on the Arcade Stick, wait till the Arcade Stick is successfully recognized by the device, **status LED** stays solid

### Wired connection

1. turn the **mode switch** to **gamepad mode**
2. connect the Arcade Stick to your Windows device via USB cable, wait till the Arcade Stick is successfully recognized by the device, **status LED** stays solid

## Xbox



- Xbox Series, Xbox One consoles are supported, Xbox 360 console is not supported
- The latest firmware version of your Xbox console is required

### Wireless connection

1. connect the **2.4G receiver** to the USB port of your Xbox device
2. turn the **mode switch** to **gamepad mode**
3. press **Xbox** button to turn on the Arcade Stick, wait till the Arcade Stick is successfully recognized by the Xbox console, **status LED** stays solid

### Wired connection

1. turn the **mode switch** to **gamepad mode**
2. connect the Arcade Stick to your Xbox console via USB cable, wait till the Arcade Stick is successfully recognized by the Xbox console, **status LED** stays solid

## Button Swap


1. press and hold any of the two buttons you would like to swap, then press the **star** button to swap them
  2. press and hold any of the two buttons which have been swapped and press the **star** button to cancel it
- the **profile LED** will blink continuously when the swapped buttons are pressed
  - the swapped buttons will not be saved after the Arcade Stick is turned off
  - **Joystick, view/menu/share** and **Xbox** buttons are not supported

## Volume Control

- beeps when adjusted to maximum/middle value/minimum


### 1

- press and hold **profile + up/down** to turn up/down in-game volume

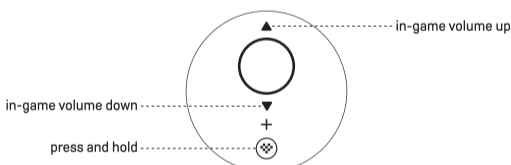

### 2

- press and hold **profile + left/right** to adjust the balance between voice and game volume

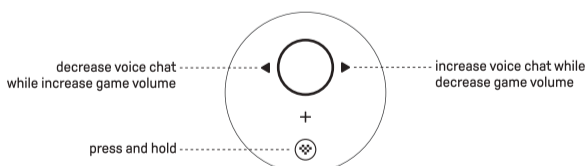

## Battery



<b>Status LED indicator –</b>		<b>LED indicator –</b>
low battery	→	red LED blinks
battery charging	→	green LED blinks
battery full charged	→	green LED stays solid

- build-in 1000mAh Li-on rechargeable battery with 30 hours of play time (20 hours when connected with headphones) and with 4 hours charging time

## Ultimate Software

- press **profile** button to activate customised profiles. The profile LED will not light up when using the default setting
- It gives you elite control over every piece of your Arcade Stick: customize button mapping, adjust stick & trigger sensitivity, and vibration control. Please visit [support.8bitdo.com](http://support.8bitdo.com) for the application

## Re-pair the Arcade Stick and Receiver

follow the steps below to re-pair the Arcade Stick and receiver:

1. with the Arcade Stick off, press and hold the **star** and **profile** buttons, then press **Xbox** button to turn on the Arcade Stick, the **status LED** will blink rapidly
2. plug the receiver into the USB port of your Windows device or Xbox console, wait for the Arcade Stick to pair with the receiver automatically
3. the LEDs on both Arcade Stick and receiver will stay solid when the connection is successful

## Support

- Please visit [support.8bitdo.com](http://support.8bitdo.com) for further information & additional support